PIXMA iP4200

PARTS CATALOG

Canon

PIXMA iP4200









DESCRIPTION

1-1 OM2-2219-000 CASSETTE UNIT 2 QC1-6377-000 COVER, CASSETTE 3 QY6-0059-000 PRINT HEAD	2 - 1 QK1-1479-000 AC ADAPTER: 100V-120V 50/60HZ
4 QK1-0278-000 CORD, POWER 100V-120V	



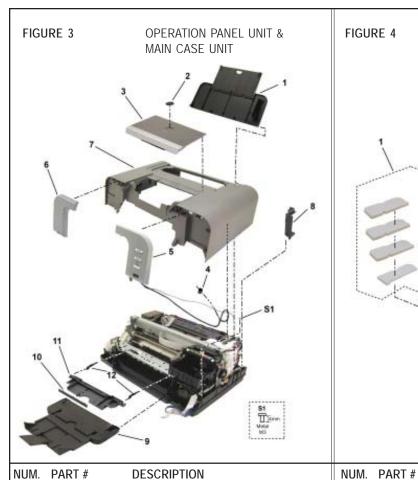

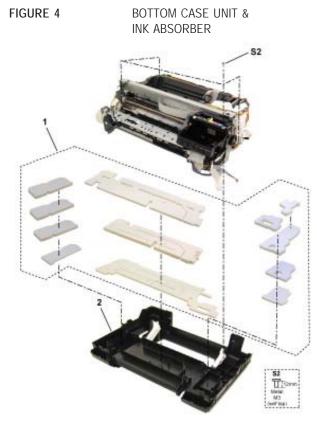


DESCRIPTION

	174141 #	DECORUM FIGHT		174141 #	DECORUM MON	
3 - 1	QM2-2226-000	PAPER SUPPORT UNIT	4 - 1	QY5-0146-000	ABSORBER KIT	
2		EMBLEM, PIXMA	2	QM2-2227-000	BOTTOM CASE U	NIT
3	QM2-2222-000	ACCESS COVER UNIT				
4	WE8-5881-000	CORE, RING				
5	QM2-2225-000	PANEL COVER R UNIT				
6	QM2-2224-000	PANEL COVER L UNIT				
7	QM2-2221-000	MAIN CASE UNIT				
8	QC1-6405-000	COVER, I/F				
		FRONT DOOR UNIT				
10	QC1-6199-000	COVER, CDR TRAY BASE				
		W/O CDR PRINTING				
11	QM2-2220-000	INNER (CDR) TRAY BASE UNIT				
12	QC1-6321-000	ARM, RELEASE (2)				


PIXMA iP4200



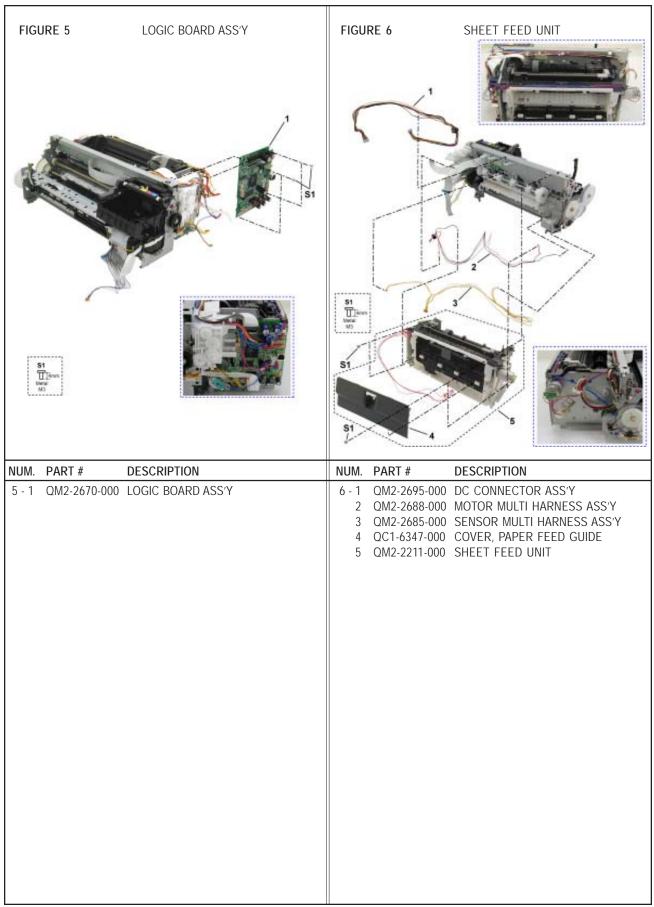

PIXMA iP4200



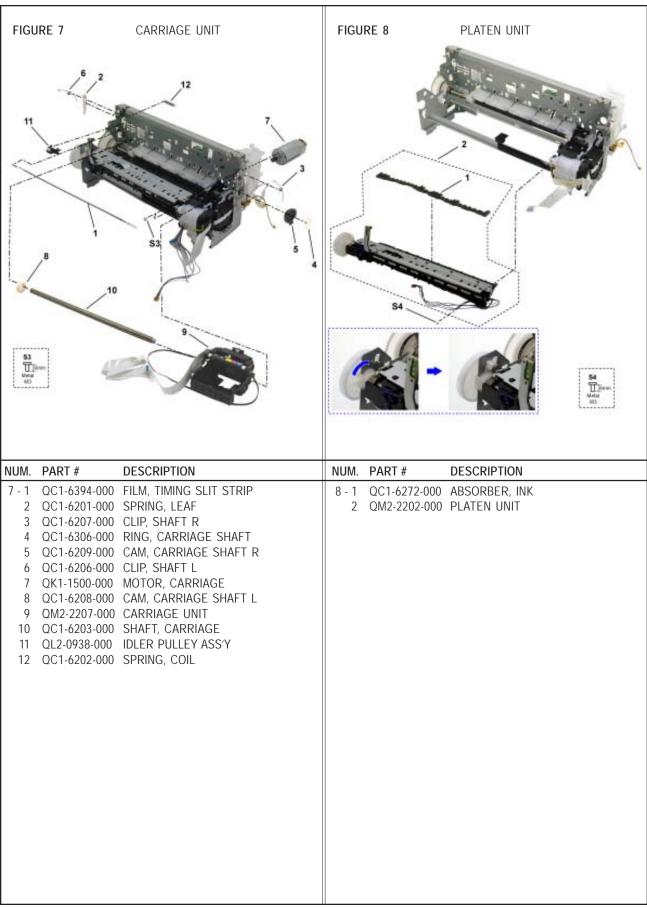

PIXMA iP4200



