





3. Disassembly and Reassemble

This section of the service manual describes the disassembly and reassembly procedures for the LE32A55*P LCD TV.

⚠ WARNING: This monitor contains electrostatically sensitive devices. Use caution when handling these components.

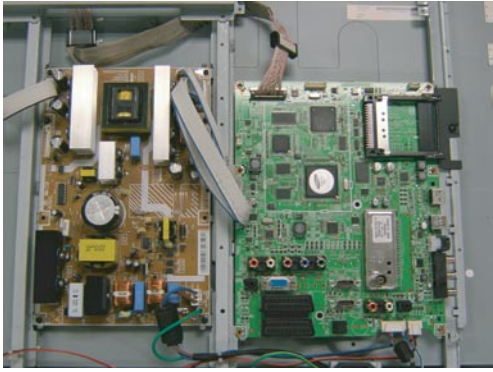

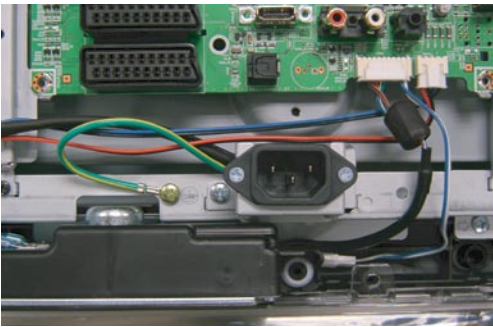





3-1. Disassembly

- ⚠ Cautions:**
1. Disconnect the monitor from the power source before disassembly.
 2. Follow these directions carefully; never use metal instruments to pry apart the cabinet.

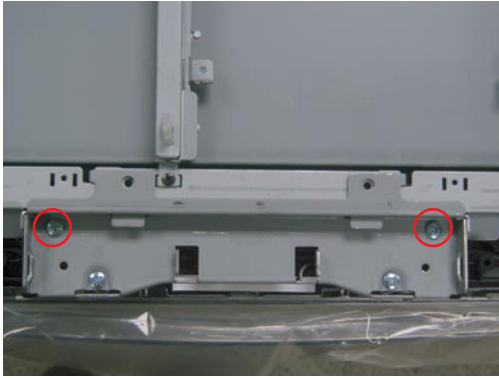

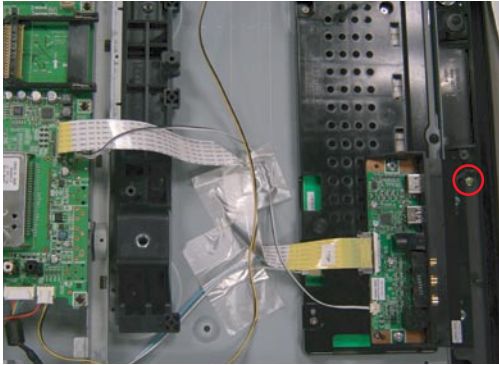





Description	Picture Description	Screws
1. Place monitor face down on cushioned table. Remove the screws from the Stand. Remove stand.		
		
		 ○ x 4

3. Disassembly and Reassemble

Description	Picture Description	Screws
<p>2. Remove the screws of rear-cover.</p>		 ○ x15
		 □ x4 only 46", 52"
<p>3. Lift up the rear-cover.</p>	 	

Description	Picture Description	Screws
<p>4. SMPS and Main board.</p>		 x12
<p>5. Remove the screws of Left/Right, Bottom Left/Bottom Right and center woofer speaker.</p>		 x2  x2  x1
		 x8

3. Disassembly and Reassemble

Description	Picture Description	Screws
<p>6. Remove the screws of Stand BKLT. Lift up the Stand BKLT.</p>		 ○ x4
<p>7. Remove the Side AV Ass'y (only 46")</p>		 ○ x2
<p>8. Remove the Bracket of Boards</p>		 □ x8  ○ x8
<p>* Caution: Don't force yourself on wall mount bracket during disassembly. It may be deformation.</p>		

Description	Picture Description	Screws
<p>9. Remove the screws on Panel.</p>		 ○x4
		 ○x7
		
		

※ Reassembly procedures are in the reverse order of disassembly procedures.

Memo