

## AM-300/400

### QUICK SETUP GUIDE

#### For detailed instructions

on setting up and using the AM-300/400, see the online guide on the CD-ROM.  
To open the guide, double-click the **Manual** folder on the CD-ROM, double-click **English**, and then double-click **Online Manual.pdf**.  
(Note: Acrobat Reader 5.05 or higher is required to view the manual. To install Version 5.05, double-click **Acrobat Reader, English**, and then **ar505enu.exe** on the CD-ROM.)  
All company names and product names appearing in this setup guide are the trademarks of their respective owners.

**1** Make sure you have the following items. If any are missing, contact your dealer or retailer.  
**Note:** The shape of the line cord plug varies by country. An adapter (not shown) is provided in some countries.

Telephone line cord (AM-400 only)    Toner cartridge    Drum cartridge

Output tray    Document feeder tray    Setup Guide    CD-ROM

**2** Attach the trays.

When the tray stops, lift the end slightly and push in.

**3** **Important:** Pull the scanner release toward you to release the scanner lock.  
**Caution:** Be sure to release the scanner lock before plugging in the power cord.

**4** Plug the power cord into a standard, earthed power outlet.  
**Note:** The power outlet must be installed near the equipment and must be easily accessible.

**Note:** The shape of the power plug varies by country

**5** **AM-400 only:** Connect the phone line cord to the **TEL. LINE** jack and a wall jack.  
**Italy:** Use the provided adapter to connect the line cord to the wall socket.

**Note:** The shape of the line cord plug varies by country.

**6** Install the toner cartridge and drum cartridge.

- Press **1**. Open the side cover **2** and then the front cover **3**.
- Remove the drum cartridge from its packaging.
- Insert the drum cartridge, sliding it along the guides.  
**Caution!** Do not touch the fusing unit under the side cover after the machine has been in operation, as it may become very hot.  
Grasp this handle to push the cartridge in
- Remove the toner cartridge from its packaging. Shake the cartridge side to side four or five times to distribute the toner evenly within the cartridge.
- Insert the toner cartridge, sliding it along the guides **until it clicks into place**.  
Press on the arrow mark to make sure the cartridge clicks into place
- Close the front cover **1** and then the side cover **2**.
- Press **1** to select "YES" and then press **2**. (This resets the toner cartridge counter.)  
Display:  
TONER EXCHANGED?  
1: YES, 2: NO
- Reset the drum cartridge counter:  
a. Press **MENU** once and then **z** or **>** until "LIFE" appears in the display.  
b. Press **3 DEF** and then **2**.  
c. Press **2** repeatedly to exit.

**7** Load paper.

- Remove the output tray.
- Insert a stack of paper into the tray, print side up.  
The stack should not be higher than this line
- Squeeze the sides of the paper guide and slide it to the slot for the length of paper loaded.
- Replace the output tray.

**8** **AM-400 only:** Set the date and time that appear in the fax mode display.

- In the date and time display of fax mode (press **FAX** if needed to select fax mode), press **MENU**, **2 ABC**, **1**.
- Enter a two-digit number for the day ("01" to "31").  
Example: the 5th **0** **5 JKL**
- Enter a 2-digit number for the month.  
Example: February **0** **2 ABC**
- Enter the year (four digits)  
Example: **2 ABC** **0** **0** **5 JKL**
- Enter a two-digit number for the hour (00 to 23) and a two-digit number for the minute (00 to 59).  
Example: 9:25 **0** **9 WXY** **2 ABC** **5 JKL**
- Press **ENTER**.
- Press **2** repeatedly to exit.

• To clear a mistake press **z**.

9

**Install the software on your computer. (The software allows the machine to be used as a printer and scanner.)**


**Note:** A USB 2.0 or 1.1 cable is required to connect the machine to your computer. Please purchase this separately.

1. **Make sure that a USB cable is not connected to the machine and your computer.** (The cable will be connected in Step 11.)

- If a cable is connected and a Plug and Play window appears, close the window and disconnect the cable.


2. Insert the Sharp CD-ROM into your computer's CD-ROM drive.
3. Windows® XP: Click the **start** button, click **My Computer**, and double-click the CD-ROM icon.

Windows® Me/2000: Double click **My Computer** on the desktop and double-click the CD-ROM icon.

4. Double-click the **setup** icon (  ) in the CD-ROM window.
5. If the **Language Selection** window appears, select the language that you wish to use and click **Next** (the language selections will vary depending on your country or region).

6. Follow the on-screen instructions.

- When the **Setup Type Selection** window appears, select **Standard** to install all of the software components (this should normally be selected). If you only wish to install certain components, select **Custom** and then select the components that you wish to install.

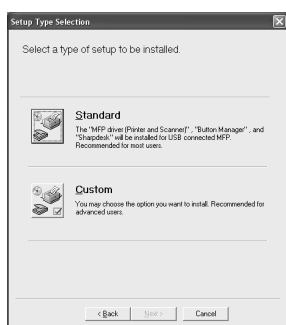


- In Windows® 2000/XP, if a warning message appears at any time regarding the Windows logo test or digital signature, be sure to click **Continue Anyway** or **Yes**.
7. When the **Finish** window appears to indicate that the selected packages have been installed, click **Close**.
  8. If the installation was a **Standard** installation, the following window will appear. Click **OK**.




- If you installed the MFP drivers using a **Custom** installation and did not install Sharpdesk, the following window will appear. Click **OK** and go to Step 11.



 
9. The following window will appear. Click **Yes** to restart your computer.



10. The Search Setup Wizard will appear. Follow the on-screen instructions to create an index database for Sharpdesk.

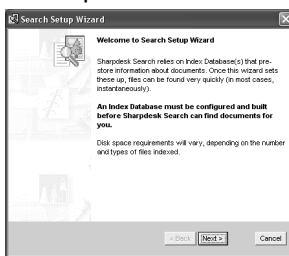

11. Make sure that the machine's power cord **is not** plugged in, and then connect the USB cable to the USB port on the machine and on your computer.

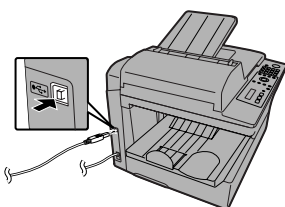

12. Plug in the machine's power cord.


- **Windows® XP:** Follow Steps 13 through 16 to complete the installation of the software.
  - **Windows® 2000:** This completes the installation of the software.
- Note:** If a warning message regarding the Windows logo test appears (the warning may appear twice), click **Yes** each time the window appears. This will complete the installation of the software.

- **Windows® Me:** This completes the installation of the software.
- Note:** In the power management settings in the **Control Panel**, **System stand by** must be set to **Never**.

#### Completing the installation on Windows® XP

13. In Windows® XP, the **Found New Hardware Wizard** will appear. Make sure that **Install the software automatically (Recommended)** is selected and click **Next**.


**Note for Windows® XP SP2:** The first window of the wizard will ask you if the wizard can connect to Windows Update. Select **No, not this time** and click **Next**.

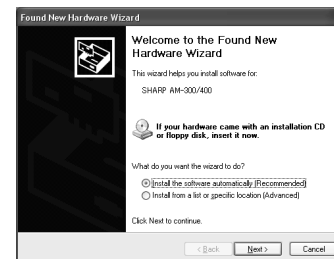

- If a warning message appears regarding the Windows logo test, click **Continue Anyway**.

14. When the wizard finishes installing the software, click **Finish** to close the wizard.

15. After a brief interval, the **Found New Hardware Wizard** will appear again. Make sure that **Install the software automatically (Recommended)** is selected and click **Next**.

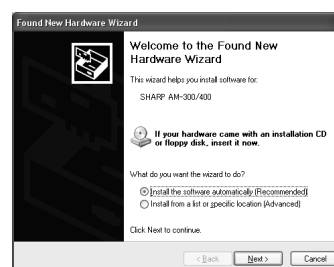

- If a warning message appears regarding the Windows logo test, click **Continue Anyway**.


16. When the wizard finishes installing the software, click **Finish** to close the wizard. This completes the installation of the software on Windows® XP.

10


**Configure Button Manager (one of the programs installed in the above step) as the program on your computer that handles scanner events from the machine.**

#### Windows® XP/Me

1. Click the **start** button, click **Control Panel**, and double-click **Scanners and Cameras**.
- If **Scanners and Cameras** does not appear in Windows Me, click **view all Control Panel options**.
2. Right-click the **SHARP AM-300/400** icon and select **Properties**.

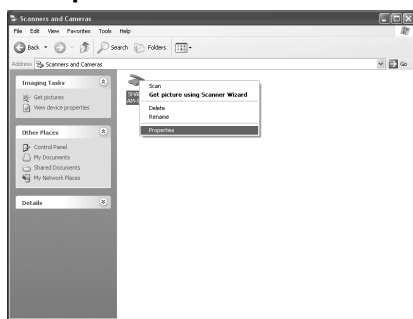

3. The **SHARP AM-300/400 Properties** appear. Click on the **Events** tab.
4. Select **SC1** from the **Select an event list**.
5. In the **Actions** field, select **Start this program** and then select **Sharp Button Manager I** from the list of programs. Click **Apply**.

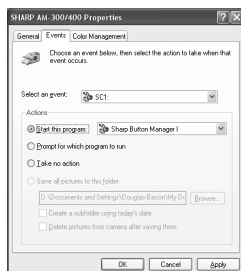

6. Repeat Steps 4 and 5 for each of events SC2 through SC6. When finished, click the **OK** button.

#### Windows® 2000

1. Click the **Start** button, point to **Settings**, and select **Control Panel**.
  2. In the **Control Panel**, double-click **Scanners and Cameras**.
  3. Select **SHARP AM-300/400** and click **Properties**.
  4. Click the **Events** tab in the **SHARP AM-300/400 Properties**.
  5. Select **SC1** from the **Scanner events** list.
  6. In **Send to this application**, select **Sharp Button Manager I**.
- If other applications appear in the list, make sure that none are selected.
7. Click the **Apply** button.
  8. Repeat Steps 5 through 7 for each of events SC2 through SC6. When finished, click the **OK** button.

#### AM-400 only:

This is a facsimile product operating in German, Austrian, Swiss, French, Italian, Swedish, Finnish, Norwegian, Danish, Spanish, Portuguese, Greek, Hungarian, Dutch and Belgian analogue public switched telephone networks which follow the TBR21 Standard.

Dies ist ein Faxprodukt für den Betrieb in deutschen, österreichischen, schweizerischen, französischen, finnischen, norwegischen, dänischen, spanischen, portugiesischen, griechischen, ungarischen, niederländischen und belgischen öffentlichen, analogen Telefonnetzen, die den TBR21-Standard verwenden.

Ce télécopieur fonctionne sur les réseaux téléphoniques publics commutés et analogiques allemand, autrichien, suisse, français, italien, suédois, finnois, norvégien, danois, espagnol, portugais, grec, hongrois, hollandais et belge qui respectent la norme TBR21.

Questo apparecchio facsimile funziona sulle reti telefoniche commutate pubbliche tedesche, svizzere, austriache, francesi, italiane, svedesi, finlandesi, norvegesi, danesi, spagnole, portoghesi, greche, ungheresi, olandesi e belghe che seguono lo standard TBR21.

Detta är en faxmaskin som fungerar tillsammans med tyska, österrikiska, schweiziska, franska, italienska, svenska, finska, norska, danska, spanska, portugisiska, grekiska, ungerska, holländska och belgiska analoga kopplade telefonnätverk som följer TBR21-standarden.

Tämä on faksilaite, joka toimii analogisissa julkisissa yleisissä valinnaisissa verkoissa, jotka noudattavat TBR21 standardia, seuraavissa maissa: Saksa, Itävalta, Sveitsi, Ranska, Italia, Ruotsi, Suomi, Norja, Tanska, Espanja, Portugali, Kreikka, Unkari, Alankomaat ja Belgia.

Dette er et faksprodukt som kan brukes i offentlige telenett som følger TBR21-standarden i følgende land: Tyskland, Østerrike, Sveits, Frankrike, Italia, Sverige, Finland, Norge, Danmark, Spania, Portugal, Hellas, Ungarn, Nederland og Belgia.

Dette er et faxprodukt, der fungerer i tyske, østrigske, schweiziske, franske, italienske, svenske, finske, norske, danske, spanske, portugisiske, græske, ungarske, hollandske og belgiske analoge offentlige tilsluttede telefonnetværker, som følger TBR21 Standarden.

Este producto es un fax que funciona en las redes telefónicas públicas conmutadas (RTPC) analógicas de Alemania, Austria, Suiza, Francia, Italia, Suecia, Finlandia, Noruega, Dinamarca, España, Portugal, Grecia, Hungría, Países Bajos y Bélgica y que cumple la norma TBR21.

Este fax está em funcionamento em rede telefónicas fixas públicas alemãs, austríacas, suíças, francesas, italianas, suecas, finlandesas, norueguesas, dinamarquesas, espanholas, portuguesas, gregas, húngaras, holandesas e belgas, que cumpiram com a Norma TBR21.

Αυτή είναι μια συσκευή φαξ που λειτουργεί σύμφωνα με τα Γερμανικά, Αυστριακά, Ελβετικά, Γαλλικά, Ιταλικά, Σουηδικά, Φινλανδικά, Νορβηγικά, Δανικά, Ισπανικά, Πορτογαλικά, Ελληνικά, Ουγγρικά, Ολλανδικά και Βελγικά αναλογικά δημόσια τηλεφωνικά δίκτυα μεταγωγής που ακολουθούν το Πρότυπο TBR21.

Ez egy fax termék, amely német, osztrák, svájci, francia, olasz, svéd, finn, norvég, dán, spanyol, portugál, görög, magyar, holland és belga analóg telefonhálózatokban működethető, amelyek megfelelnek a TBR21 szabványnak.

Dit is een faxproduct dat werkt op het Duitse, Australische, Zwitserse, Franse, Italiaanse, Zweedse, Finse, Noorse, Deense, Spaanse, Portugeuse, Griekse, Hongaarse, Nederlandse en Belgische analoge openbaar geschakelde netwerk volgens de TBR21-standaard.

The Declaration of Conformity can be viewed at the following URL address. Die Konformitätserklärung kann unter folgender URL-Adresse eingesehen werden. Vous pouvez consulter la Déclaration de conformité sur Internet, à l'adresse ci-dessous. La Dichiarazione di conformità può essere consultata all'indirizzo URL riportato di seguito. Överensstämmelsedeklarationen finns att läsa på följande URL-adress. Υπόδειξη της Δήλωσης Συμμόρφωσης μπορεί να γίνει στην ακόλουθη διεύθυνση URL. A Megfelelősségi nyilatkozat megtekinthetik az alábbi URL címen. De Verklaring van Overeenstemming kan worden nagelezen op het volgende URL-adres.

<http://www.sharp.de/doc/AM-400.pdf>

An explanation regarding WEEE (information on disposal) is included in the online guide on the CD-ROM. Please read this information.